


Metal Detector

Model No. **GC-2009**

User Manual

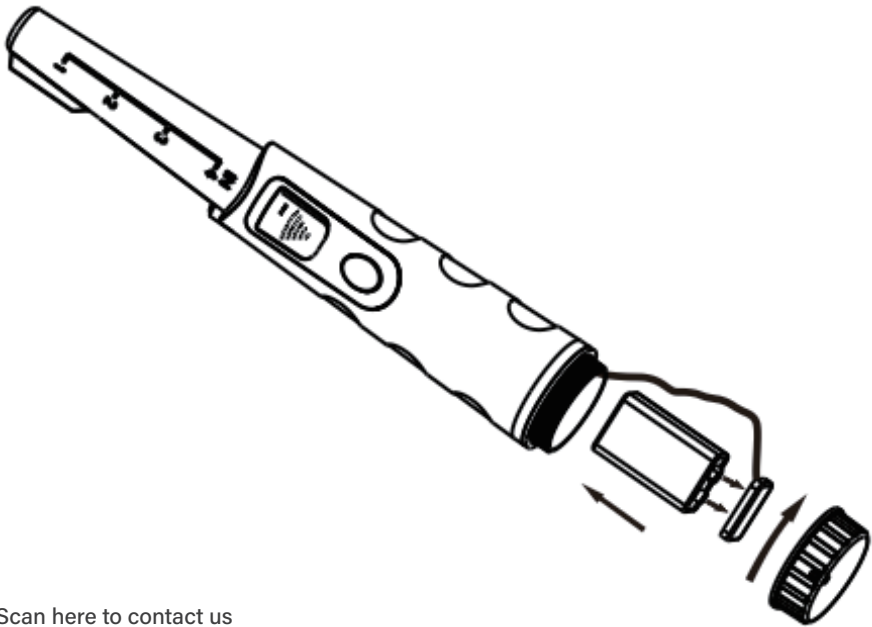


Scan here to contact us
[24Hrs Online]



<https://rmricomax.afterservice.vip>

Thank you for choosing the GC-2009 pinpoint metal detector. The unique sealed design allows using it to detect metals in any environment, including grass, mud, dirt, sand, black sand, or even 118.1 in. (3m) underwater.

Product Overview

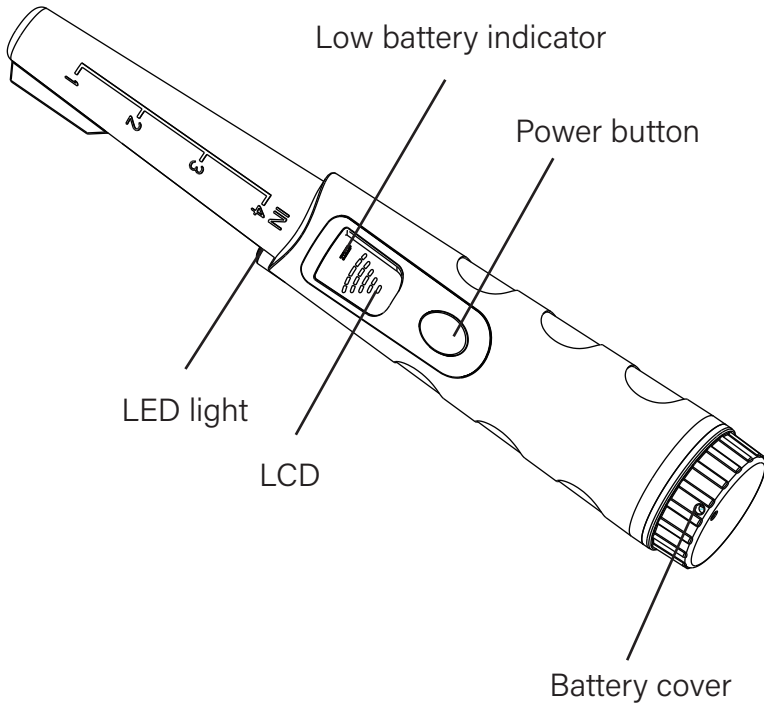

Product Features

- **Vibration, Sound & Light** - When a target is detected, the detector alarms with pulses of vibration, sounds with a buzzer, or responds with both sound and vibration.
- **LCD** - Display the detected target signal and show the battery condition.
- **Target Distancing** - As you get closer to the target, the target signal on LCD, vibration, and sound will increase in quantity.

- **Target Indication** - There are four types of target indication: LCD, sound, vibration, sound & vibration.
- **LED Light** - In dark places, you can turn on the light for better detection. Press the power button twice to turn on or off the light.
- **Automatic Tuning** - Require no adjustment.
- **Memory** - The detector memorizes the current setting when it is powered off.
- **Waterproof** - Sealed design allows using it to detect metals in the rain or up to 118.1 in. (3m) underwater.

Helpful Hints

- You can secure the detector to your wrist by using the attached wrist strap.
- Before submerging the detector into the water, please make sure the battery compartment seal is secure.
- Always use high-quality batteries such as alkaline or nickel-metal hydride (NiMH).

Battery Assembly

Rotate the battery cover counterclockwise to open the battery compartment.

Insert a standard 9-volt alkaline battery into the battery compartment, making sure the polarity is matched correctly. Then rotate the battery cover clockwise until it is tightened to assure a water-tight seal.



Operation Guide

1. **Turning on the detector:** Press the power button to turn on the detector. Then, the detector sounds and vibrates, with the LED light illuminating. A steady light indicates that the detector is ready for operation.
2. **Turning off the detector:** After use, press and hold the power button for about two seconds to turn off the detector.

Notes:

- If no metal is detected within 20 minutes, the detector will automatically turn off.
 - The detector memorizes the current setting when it is powered off.
3. **Low battery indication:** If the detector sounds and vibrates with the LED light flashing continuously for about 10 seconds, it indicates that the battery power is low. Please replace the battery immediately.
 4. **Detecting a target:** After turning on the detector, you can start detecting metals. First, you can select one type of target indication by pressing the power button.
 - Press the power button once to get a sound indication. When a target is detected, the detector will sound and the LCD will display the target signal.
 - Press the power button twice to get a vibration indication. When a target is detected, the detector will vibrate and the LCD will display the target signal.
 - Press the power button three times to get both sound and vibration indications. When a target is detected, the detector will sound and vibrate at the same time. Meanwhile, the LCD displays the target signal.
 - The signal on LCD, sound and pulses of vibration will increase in quantity as the closer the detector is to a detected target. The quantity of pulses is proportional to the target size and the distance between them. The bigger the target, or the closer the detector is to the target, the higher the pulse.

Product Disposal



Products and batteries marked with this symbol must not be disposed of with normal household waste, which contain materials that can be recovered or recycled reducing the demand for raw materials.

Used products with batteries should be taken to a recycling station and not be disposed of with household waste. Hand it over to the applicable collection station for the recycling of electrical and electronic equipment. The separate collection and recycling of the product will help to conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. Disposal must be carried out in accordance with local environmental regulations for waste disposal. **Do not** put them into fire or mutilate them, as the battery may burst or release toxic materials. **Do not** make them short-circuit, as this may cause burns. For more details about where you can drop off the appliance for recycling, please contact your local city office, your household waste disposal service or the seller from whom you purchased the product.

Warranty Information

Warranty Period:

This product is warranted to be free from defects in materials and workmanship for a period of **(1)ONE-YEAR** from the date of original purchase.

This Warranty **SHALL NOT** be Applicable in the following Cases:

- Accident, misuse, abuse or alteration of the product;
- Serving by unauthorized persons;
- Use with unauthorized accessories;
- Connecting it to incorrect current and voltage;
- Wrapping cord around product causing premature wear and breakage;
- Any other conditions beyond our control.

No responsibility, obligations or liability is assumed for the installation or maintenance of the product.

Contact Us

If you encounter any problems when using the product, please feel free to contact us through the following methods or scan the QR code to get a quick response and a satisfactory solution.

Amazon Platform: "Contact Seller"

Official Website: <https://rmricomax.afterservice.vip>

Email Address: rmricomax@afterservice.vip

Scan here to contact us
[24Hrs Online]



<https://rmricomax.afterservice.vip>