

GEONFINO



Smart Lock
Model No.G4 Pro
Installation instruction



PASSWORD



FINGERPRINT



APP



RFID CARD








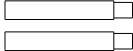
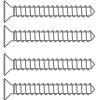




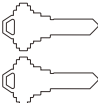
BLUETOOTH

Please keep and read this instruction before installation, we also prepared instruction video to help on Amazon Page. If you need further assistance, please contact Customer Service by email: geonfino@afterservice.vip

Table of Contents



- <1> Installation Guide
- <12> How to Use
- <13> Programming Instructions
- <15> App Guide
- <26> Gateway Management
- <27> Low Power/Emergent Power
- <28> Restore Factory Settings
- <28> Factory Default Settings
- <29> Troubleshooting
- <30> FCC Warning
- <31> About GEONFINO

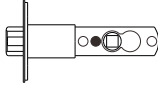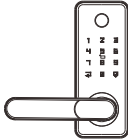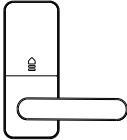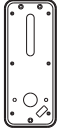Installation Guide

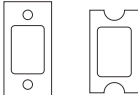Package List		
A.Latch 	B.Keypad 	C.Interior Assembly 
D.Mounting Plate 	E.Square Pole 	F.Studs 
G.Latch/Strike Screws 	H.Mounting Plate Screws 	I.Mounting Plate Screws 
J.Strike/Strike Box 	K.RFID Cards 	L.Keys 

1 Prepare the door and check dimensions


A Measure to confirm that the backset is either 2-3/8" or 2-3/4" (60 or 70 mm).

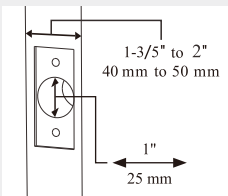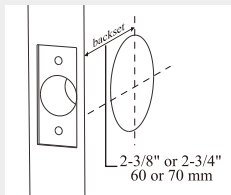

B Measure to confirm that the hole in the door edge is 1" (25mm). And measure to confirm that the door is 1-3/5" to 2" (40 mm to 50 mm) thick.

2 Install the latch and strike


A Hold the latch in front of the door hole, with the latch face flush against the door edge.

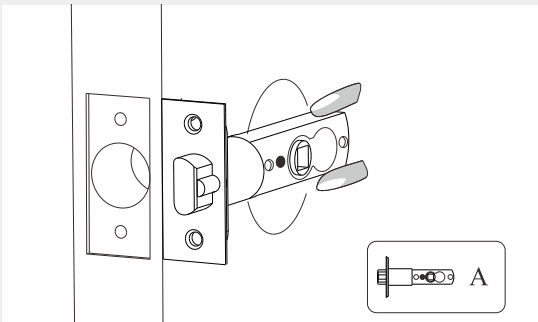

<2>

Is the slotted hole centered in the door hole?


YES

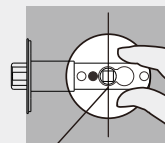

Slotted hole is centered.

➔ No adjustment is required. Proceed to next step.


NO

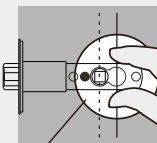

Slotted hole is not centered.


➔ Rotate and pull the latch as shown to extend latch.

a

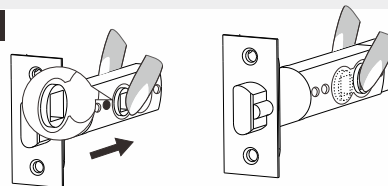

Slide the slot to the right as shown

b

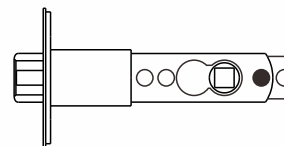


<3>

B Determine the direction of the latch tongue.

a

Left push door

Right push door

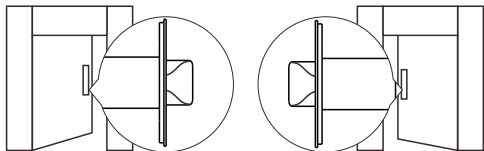

Indoor

Indoor

Outdoor

Outdoor

Left push door


Right push door

When the door is pushed inward, the latch tongue is installed outdoors.

b

Left pull door

Reft pull door

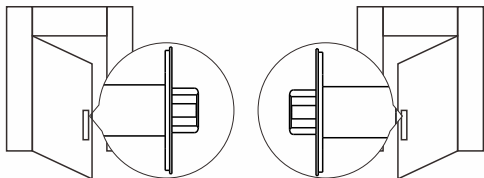

Indoor

Indoor

Outdoor


Outdoor

Left pull door

Reft pull door



When the door is pulled out, the latch tongue is installed inward.

C Install the latch

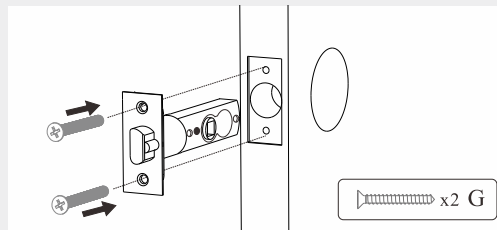

D Install strike on the door frame.

 ⚠ IMPORTANT: Make sure hole in door frame is drilled a minimum of 1" (25 mm) deep.


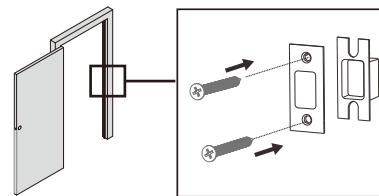


3 Confirm the direction of the door


⚠ Look at the door from OUTSIDE

Left Hand Door

Right Hand Door

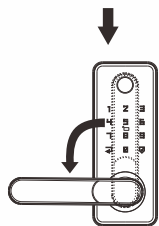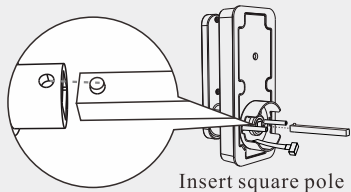

Rotate the front handle 90° to the left.

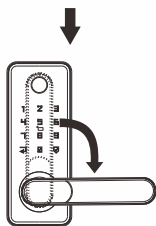


Rotate the front handle 90° to the right.


<6>




Press the square pole

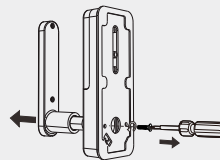


Unscrew the rear handle screw as shown in the picture and remove the rear handle.

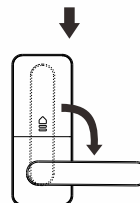


Rotate the rear handle 90° to the right.

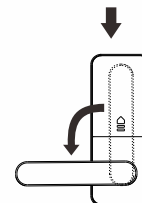

Rotate the rear handle 90° to the left.

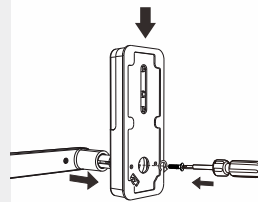

Install the rear handle as shown.

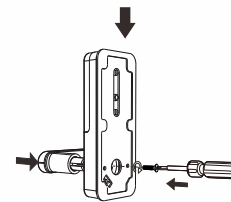


Install the rear handle as shown.

<7>



If you change the handle in the wrong direction, please follow the instructions below.

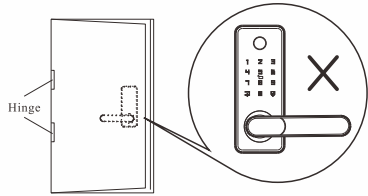

a

Grab the square pole and pull it outward



b

Turn the handle to the correct position


c

Press the square pole to restore

4 Install the keypad

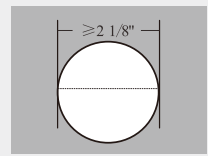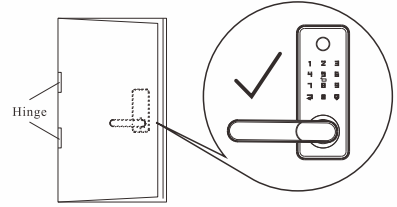


➔ No adjustment is required. Proceed to next step.

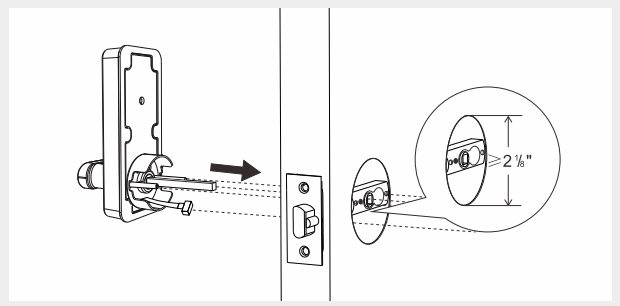


Install the keypad directly


5 Install the interior assembly

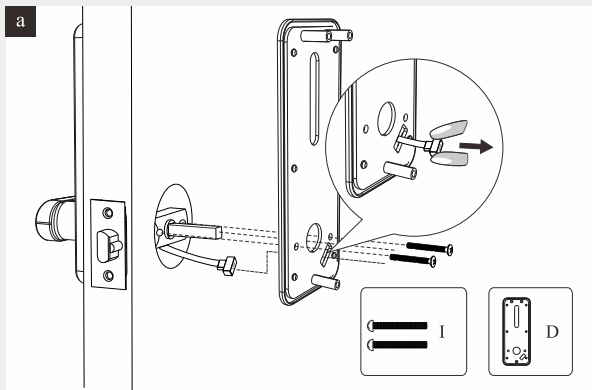

The data cable passes through the mounting plate as shown in the figure above, the square pole passes through the round hole of the mounting plate, and then fix the mounting plate with screws.

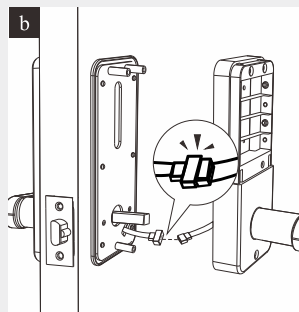


Connect the data cable

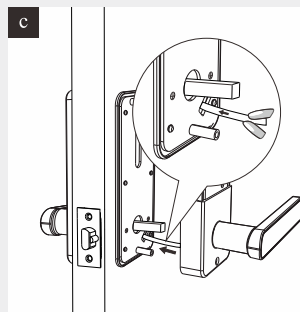


Too long data cable stuffed into the door


<10>

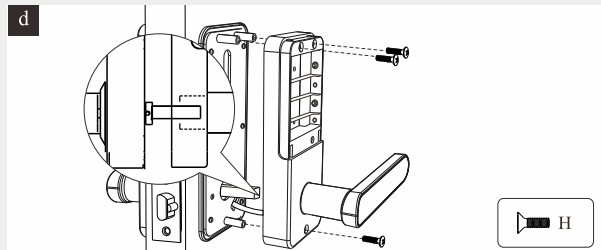

Install the interior assembly with screws

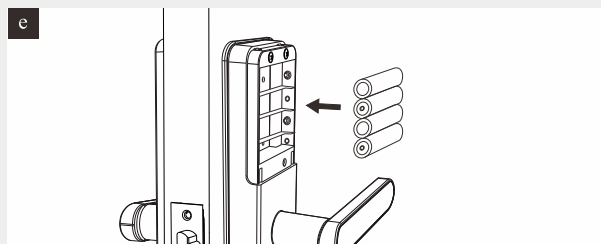

Install the battery

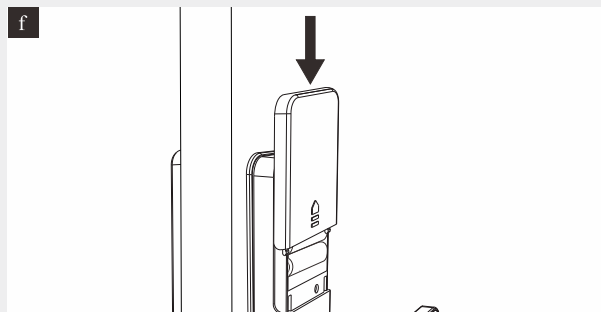


Install the battery cover


<11>

How to Use


Unlock the door from outside

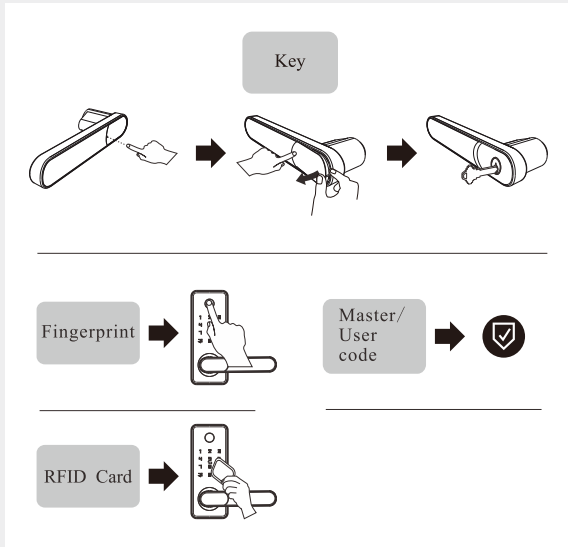

Unlock the door from inside

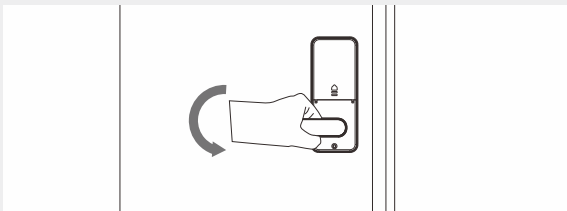

< 12 >

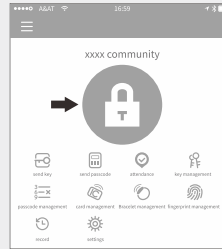

Via app

Click "🔒" to unlock the door from outside or inside.

Note: Please keep your phone near the door lock within 32.8ft (10m).

Programming Instructions

Information & Safety warnings

- Protect your User Codes and Master Code.
- Protect your key. It is suggested to put it outside the door, such as your car.
- Restrict access to your lock's interior assembly and routinely check your settings to ensure they have not been altered without your knowledge.
- This lockset is designed to provide the highest standard of product quality and performance. Care should be taken to ensure a long-lasting finish. When cleaning is required, use a soft, damp cloth. Using lacquer thinner, caustic soaps, abrasive cleaners or polishes could damage the coating and result in tarnishing.

⚠ IMPORTANT: Do not load batteries until lock is completely installed.

< 13 >

Definitions

Master code

Required for programming and feature settings. Master code can be used to unlock the door under vacation mode. The default master code needs to be changed before programming.

Property owner/manager should keep this information confidential.

1. Master Code (6 to 8) digits: The default Master Code is 123456.

It is required that you change it to a code of your own before programming.

2. User Code (6 to 8) digits: A total of 200 User Codes may be programmed.

Wrong entry limit

After 5 unsuccessful attempts at entering a valid PIN code, the unit will shut down for 5 minutes.

Unlock with fake code

User can prevent PIN code exposure from strangers by entering random digits before or after PIN code.

83618 137192 14710

password

Random digits




App Guide

A Download app "TTLock"




Android Mobile Phone--Search "TTLock" from Google Play.
Apple Mobile Phone--Please search "TTLock" from App Store.

B Register a new account (phone number or email)

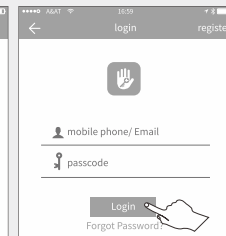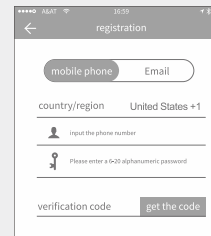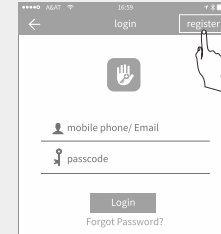


C Lock adding

- a Turn on Bluetooth and enter the interface of adding lock in app.

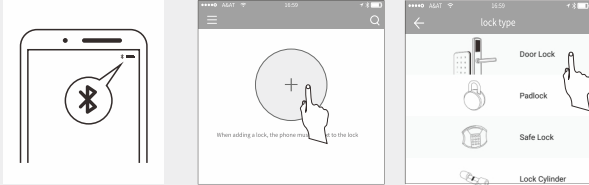


- b Light up the screen and add the lock

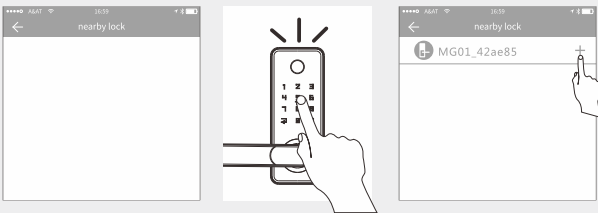

Note: Please keep your phone near the door lock within **10 meters**.

D Key management

After the administrator successfully adds the lock, owner owns the highest administrative rights to the lock. Owner can send keys to others. Meanwhile owner can increase the key management that is about to expire.

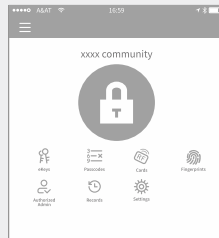


Click the type of lock it will show the time-limited ekey, one-time ekey and permanent ekey.


Time-limited ekey: The ekey is valid for the specified time.

Permanent ekey: The ekey can be used permanently.

One-time ekey: The ekey will be automatically deleted once it has been used.

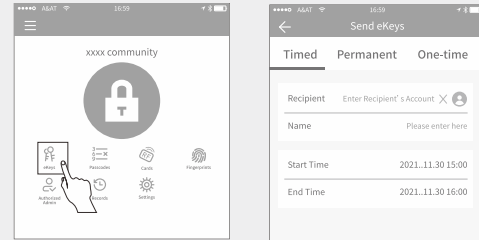

The manager can delete ekey, reset ekey, send and adjust the ekey, meanwhile he can search the lock record.

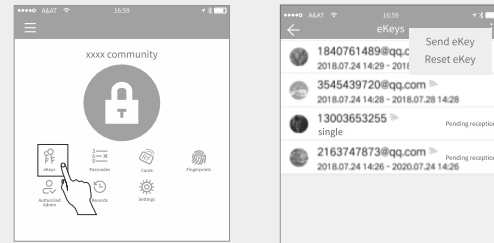


E Passcode management

After inputting the passcode on the keyboard of the lock, press the unlock button to unlock. Passcodes are classified into permanent, time-limited, one-time, empty, oop, custom, etc.

The password that has been set can only be unlocked, but cannot be locked.


a Permanent passcode

The permanent passcode must be used within 24 hours after it is generated, otherwise it will automatically expire.

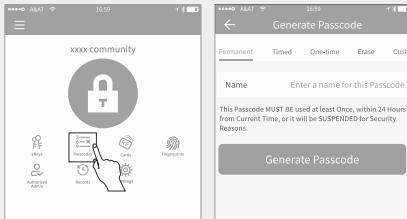


b Time-limited passcode

The time-limited passcode can own an expiration date, which is a minimum of one hour and a maximum of three years. If the validity period is within one year, the time can be accurate to the hour; if the validity period is more than one year, the accuracy is month when the time-limited passcode is valid, it should be used within 24 hours, otherwise it will automatically expire.

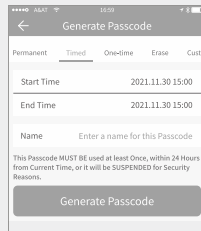

c One-time passcode


One-time passcode can only be used for onetime, and which is available for 6 hours. It will automatically expire.

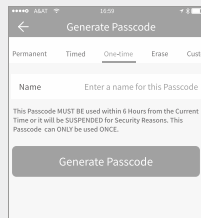

< 18 >

d Erase passcode

Erase Passcode is VALID for 24 Hours from the current time. Caution -All passcodes used on this lock will be deleted on using this passcode.

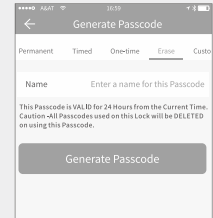


e Custom passcode

You can configure your own passcode. It needs to be between 6- 9 digits in length. You can configure the customized passcode via Bluetooth or remotely via a gateway.




f Recurring passcode

The recurring password can be reused within a specified time period, including daily type, weekday type, weekend type, and more.

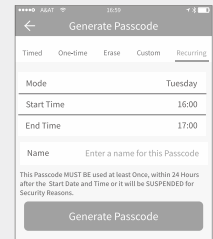

g Passcode sharing


The system add new communication ways of Facebook Messenger and Whatsapp to help users share the passcode.

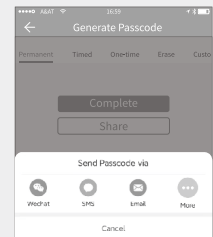

< 19 >


h Passcode management

All generated passcodes can be viewed and managed in the password management module. This includes the right of changing the password, deleting the password, resetting the password, and unlocking the password.

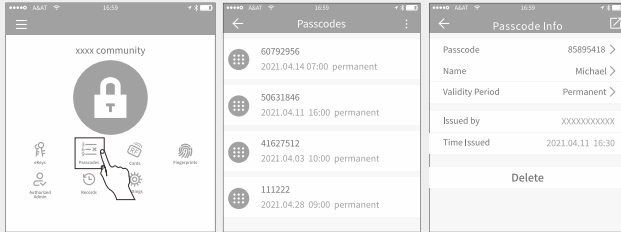


F Card management

You need to add the RFID card first. The whole process needs to be done via the app beside the lock. The validity period of the IC card can be set, either permanent or time-limited.

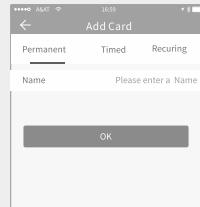


All RFID cards can be queried and managed through the RFID card management module. The remote card issuance function is displayed in the case of a gateway, the item is hidden.

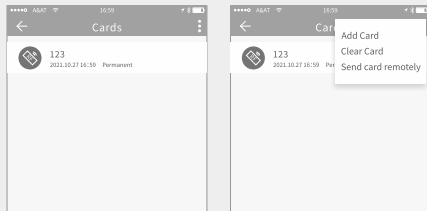



<20>

a Add a RFID card

Click " Cards ", then click "Add card".

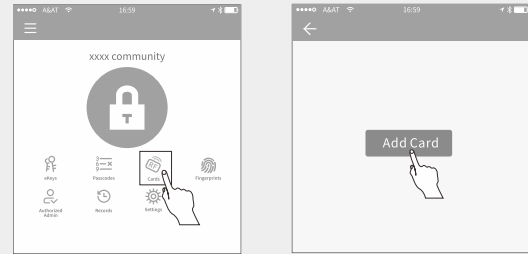


There are three options for you. Select "permanent", "timed" or "recycling" as needed. Enter the name of the RFID card, and click "OK". Then the RFID card can be successfully added when it is close to the card sensing area of the lock for 2-3 seconds.

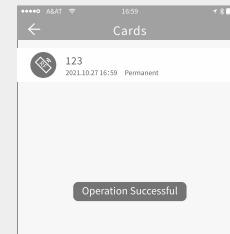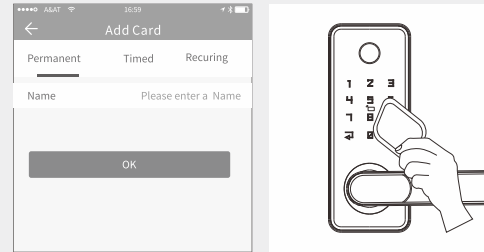


<21>

To add an RFID card again, click on the upper right corner of the "Cards" homepage, click "Add Card". Then repeat the operation of adding RFID card.

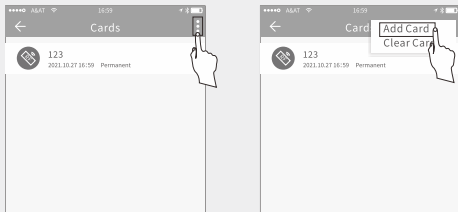


b Delete RFID cards

Click on the upper right corner of the "Cards" homepage and click "Clear Card" to delete all RFID cards.

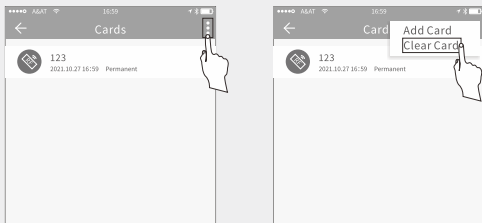

We can also choose a single RFID card to delete.

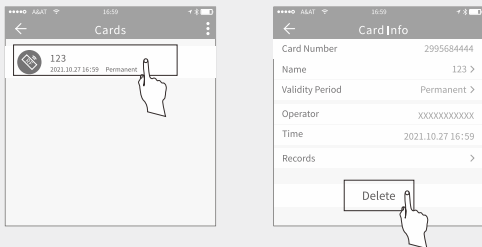


G Fingerprint management



Fingerprint management is similar to IC card management. After adding a fingerprint, you can use the fingerprint to unlock the door.

a Add fingerprint

Click "Fingerprint", then click "Add Fingerprint".

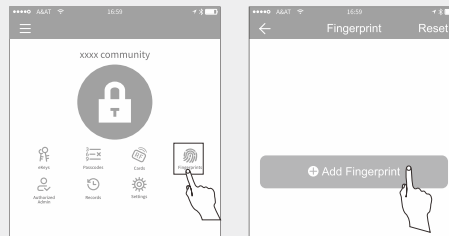


There are three options for you. Select "permanent", "timed" or "recycling" as needed. Enter the name of the Fingerprint, and click "OK". Then click "Start" and you will be required to Place and remove your finger from the sensor 4 times.

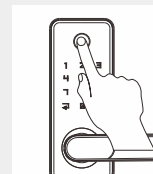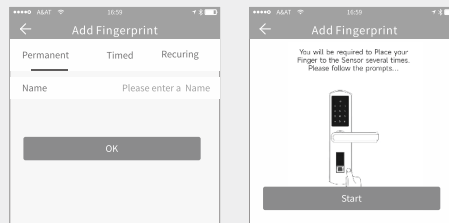


H Records

It records who comes and goes, and when for 24/7 access logs, get all records about the door unlock/lock anytime and anywhere.

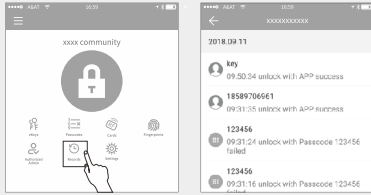


I Setting

In the system settings, it includes touch unlock switch, group management, gateway management, security settings, reminder, transfer smart lock and so on.

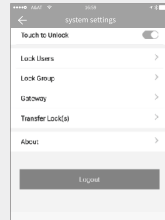

a User management


The user name and phone number can be seen in the user list. Click the customer you want to view to get the door lock information.

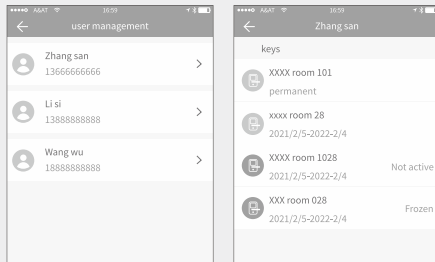

<24>

b Key groups management


In the case of a large number of keys, you can use group management module.

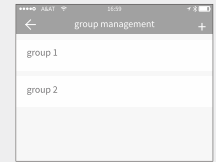

c Transfer admin rights


The administrator can transfer the lock to other users or to the apartment (Room Master user). Only the account that manages the lock has the right to transfer the lock. After inputting the account, you will receive a verification code. Filling in the correct number, you will transfer successfully.

••• The account of the apartment transfer receive must be the administrator account.

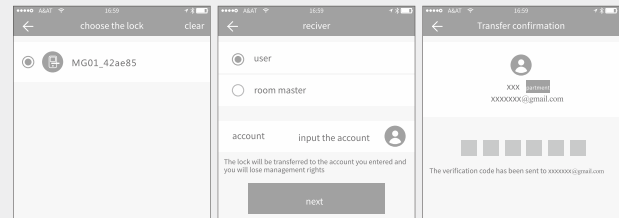

d Lock recycling station

If the lock is damaged and cannot be deleted, the lock can be deleted by moving it into the recycling station.

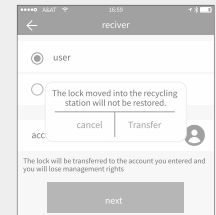

<25>

Gateway Management

(Gateway needs to be purchased separately.)

The smart lock is directly connected via Bluetooth, that is why it is not attacked by the network. The gateway is a bridge between smart locks and home WIFI networks. Through the gateway, the user can remotely view and calibrate the lock clock, read the unlock record. Meanwhile, it can remotely delete and modify the password.




Gateways are added via an app before they can be used. Here are the steps:

- (1) Open the TTLOCK app;
- (2) Touch the "☰" icon on the top left of the screen;
- (3) Select [Gateway];
- (4) Select the "G2";
- (5) Plug in the Gateway and power it on;
- (6) While the light is flashing alternately in red and blue, press "+" sign;
- (7) Add Gateway;
- (8) Select the network and input your WiFi password.


⚠ Notice: If the above process times out, please power off and try again.

Low Power

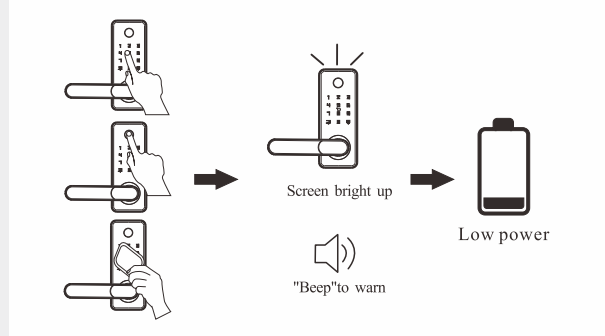

When the smart lock is opening, the screen will brighten up and "beep" to warn that the battery is low power.

Emergency Power

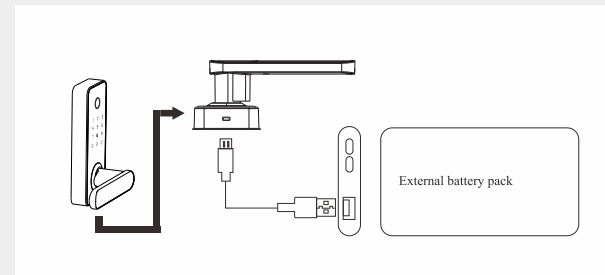


If the lock is low power and unable to operate, there is a micro USB power socket at the bottom of lock for power supply.

Factory Default Setting


Settings	Factory Default
Master Code	123456
Auto Lock	abled
Silent Mode	Disabled
Wrong Code Entry Limit	5 times
Shutdown Time	5 mins

Restore Factory Settings

Restore on app

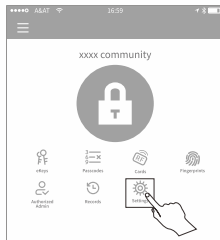

Select
“Settings”
in the app

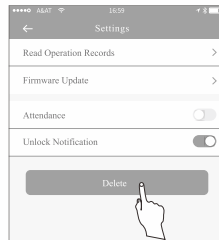


Select “Delete”
and insert user
login password

<28>

Restore on lock

1. Press and hold the reset button.
2. Keep holding the reset button for 6 seconds, until you hear the sound of beep.

Note: This operation IC wired and battery need to be installed.

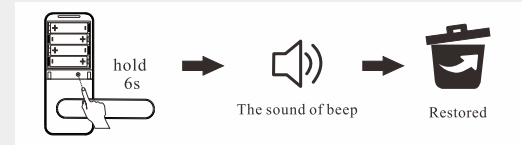

Troubleshooting

The lock cannot be unlocked by the keypad.

Make sure that the codes are not disabled. If needed, restore the lock's default settings.

The keypad doesn't respond when touched (no lights are visible and no beeping is heard).

Make sure the cables are properly connected, and make sure the batteries are new and installed correctly.

I forgot my Master Codes.

Perform a reset in order to erase all passcodes. Once the reset is complete, all passcodes will be erased and the Master code will return to the default value (123456).

The lock cannot connect app via bluetooth.

Please make sure the bluetooth is on. The app is ready to search the lock. If needed, restore the lock's default setting.

Multiple attempts unlock the door also failed to open.

Use the key to open the lock and change the battery. If needed, please contact customer service.

<29>

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This device should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

GEONFINO

Dear customer,

Greetings!

Thank you very much for your purchasing! We are so honored to have you as our customer, and we have great confidence to provide you with premium products and friendly service.

About GEONFINO

As an innovative and high technology corporation, GEONFINO is dedicated to R&D, designing, producing and marketing of Smart lock products. Our top-guns in the Smart lock field have constantly developed a series of products with features like fashion, human care, energy efficiency, and environment protection. And we highly value concepts of "People Oriented, Practical and Innovative." a professional seller in the smart lock field will always be a nice company to your life!

Warranty

GEONFINO not only provides a 1-year warranty for all our products but also offers high-level after-sales service. Please kindly contact us immediately and we will supply a replacement or refund if you encounter any of the followings:

1. Receiving defective items;
2. Lacking of packaging;
3. Parts are broken in transit;
4. Item stops working within warranty;
5. Wrong order.

Importance

Valuable customers, if you like our products and service, your positive feedback and reviews will be inspiring comments on our work. If you're dissatisfied with what you get, before writing negative feedback, please contact us, we will try our best to solve the issue to your satisfaction. Thanks for your vote of confidence again! Wish you a very happy life!

Best regards!

Customer Service E-mail: geonfino@afterservice.vip

Scan here to contact us
[24Hrs Online]



<https://geonfino.afterservice.vip>