


INSTRUCTION MANUAL

Remote Tower Fan

Model NO.: NDTFT14RH

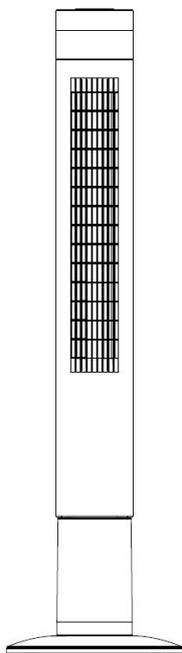

Please read this manual carefully before operating this product
Keep this manual for further reference.

Part 1 Important safeguards

Thanks sincerely for choosing our tower fan. In order for better use, please read this manual thoroughly before using.

WARNING: To reduce the risk of fire, electrical shock, or injury to person: This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

1. The product is for household use only.
2. Connect the appliance to a AC supply of the voltage specified on the rating plate.
3. Never leave the fan unattended while it is in use. Always turn the product to the OFF position and unplug it from the electrical outlet when not in use.
4. Extreme caution is necessary when any fan is used by or near children, invalids or elderly person and whenever the fan is left operating and unattended.
5. Do not run cord under carpeting and do not cover cord with throw rugs. Arrange the cord away from traffic area and where it will not be tripped over.
6. Do not operate the fan with a damaged cord or plug, or after the fan malfunctions, has been dropped, or damaged in any manner.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person to avoid a hazard.
8. Use the fan in a well-ventilated area. While using, distance of no less than 20cm should be kept away from wall or corner to ensure the air intakes or exhaust openings should not be blocked unexpectedly.
9. Do not insert or allow fingers or any other objects the grilles or louvers to avoid a mechanical danger when in use. Do not block air intakes or exhaust openings in any manner.
10. Use the fan on flat, dry floor only.


Part 2 Brief introduction

This tower fan is with multiple functions. Like 3 speed,3 mode, 85 degree oscillation, 12H timer, remote control. With the above functions, our tower fan can provide coolness, healthy and luxury life lifestyle.

Part 3 Specification


MODEL NO	RATED	POWER	CLASS
NDTFT14RH	120V, 60Hz	50W	II

Part 4 Structure

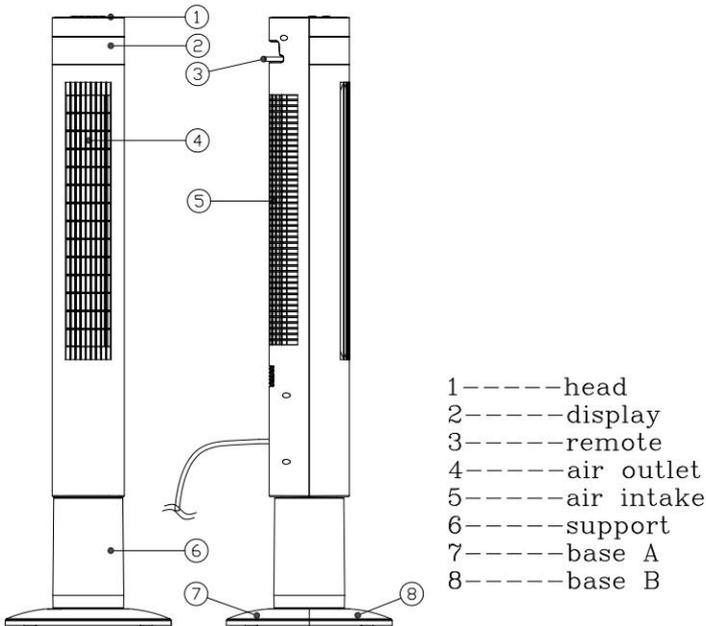


Part 5 Installing

1. Taking out the two bases from the gift box. Connect together.

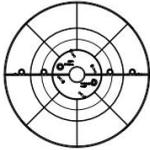



2. Connect fan body with the base by 4pcs screws.(Show in below pic)

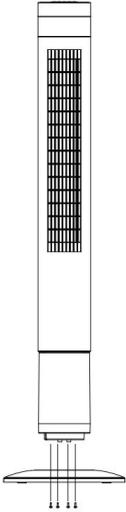

Part 6 Function

1. Temperature indicator
2. Timer indicator
3. Oscillation indicator
4. Low fan speed
5. Middle fan speed
6. High fan speed
7. Normal fan mode
8. Natural fan mode
9. Sleep fan mode
10. Show ambient temperature and timer hours.

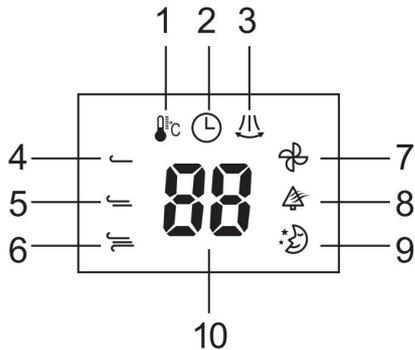

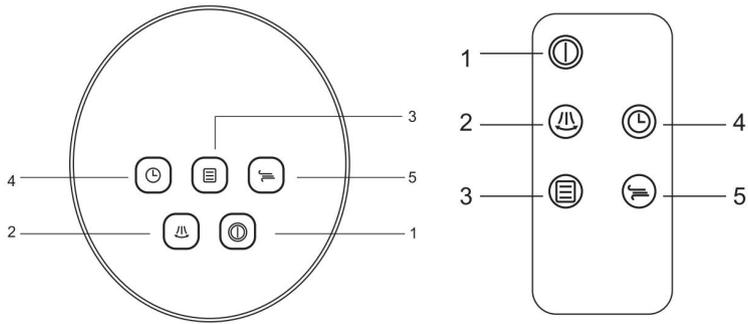

1. Power button
2. Oscillation button
3. Fan mode button
4. Timer button
5. Fan speed button

1、 ON/OFF

Press this ON/OFF button  to turn the fan ON/OFF. Press it once, the fan will start operation and shows the default wind level 2. Press the  button again to stop the fan.

2、 Mode

The model have three mode: Normal/ Natural/ Sleeping, when you run on the fan, the default mode is Normal, the LED screen will indicate , if you want to change the mode, pls press , and choose the mode you want.

Normal wind mode:

The Normal light indicator  will be switched ON when selected this mode.

Natural wind mode:

The Natural light indicator  will be ON when selected this mode. The fan will run from selected Max wind level to Min wind level mode as cycle mode.

Sleep wind mode:

The Sleep light indicator  will be ON when selected this mode.

The fan will run from selected Max wind level to Min wind level mode as cycle mode. This mode will reduce 1 wind level in every single half an hour. Keep Wind Speed Level 1 until it turns off.

3、Oscillation

Press this  button, the fan will oscillate from left to right automatically

5、Timer






Press timer, then Press  to choose the duration of time. The timer is 12 hours. To cancel the set timer, press the “Timer” button again and press  button to set as 00 Hr.

6、Wind Speed

Press  to choose the wind speed range from 1-3.

Part 7 Attention

<p>Before using, please check whether the voltage is according to the rating label.</p>	<p>Before using, please check the wire and the plug are in good state, If the wire is damaged, in order to avoid unnecessary injures, please contact or refer to a technician</p> 	<p>Please place the fan in flat ground.</p>
---	---	---
 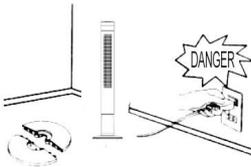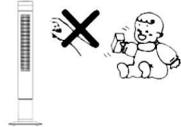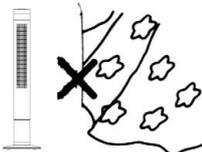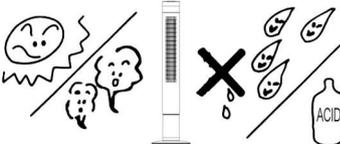
<p>Proper installation is required before using it.</p>	<p>Please turn off the power before pulling out plug and keep you hand dry when using the fan.</p> 	<p>Please keep children away from the fan to prevent them from inserting their fingers into the grilles or leaves.</p>  
<p>Do not hold tightly on the fan. when the body is oscillating.</p>	<p>When cleaning, please use soft cloth and don't use petrol, alcohol or other organic solvent.</p>	 
<p>Do not used near curtains.</p> 	  <p>Don't use the fan in hot, wet, or chemical environment.</p>	

Part 8 Maintenance and Storage

1. Always remove the plug from the socket-outlet and allow the fan to a stop before cleaning it.
2. Clean the external surfaces of the fan with a soft damp (not

dripping wet cloth)

WARNING:

Do not immerse the fan in water.

Do not use any cleaning chemicals such as detergents and abrasives. Do not allow the interior to get wet as this could create a hazard.

3. When the unit is not in use, make sure that it is unplugged from the wall

socket. To store the fan, you may pack it in the original carton and store it in a cool and dry place.

4. In case of malfunction or doubt, do not try to repair the fan yourself, it may result in a fire hazard or electric shock.

Part 9 After sale service

This appliance has a warranty of 1 years from the date of purchase, considering the following notes:

Guarantee is only valid showing the invoice or purchase ticket.

Damage caused during transportation, negligence, incorrect installation or installation, and external influences such as: atmosphere or electric rays, floods, humidity, etc. are not covered by the guarantee.

This warranty will finish when it is discovered that they have been subjected to repairs, alterations or interventions by any person not authorized.

Thank you for purchasing this product! If you have questions about assembly or operation of this product, are missing parts, or if the product is damaged, please contact us via **Amazon message** or call customer serve Phone: **213-4467172**.

IMPORTANT

Simply call our customer service department for any questions or concerns:

213-4467172

(8:30am - 5:30pm P.S.T.)

DATED PROOF OF PURCHASE REQUIRED FOR WARRANTY SERVICE.

AVIS

Veillez appeler le service à la clientèle pour toutes questions au:

213-4467172

(8:30am - 5:30pm P.S.T.)

PREUVE D'ACHAT ORIGINALE REQUISE POUR SERVICE DE GARANTIE.

IMPORTANTE

Sólo hay que llamar nuestro departamento de servicio al cliente en caso de tener preguntas o inquietudes:

213-4467172

(8:30am - 5:30pm P.S.T.)

SE REQUIERE PRUEBA DE COMPRA CON FECHA PARA SERVICIO BAJO GARANTÍA.

Add: 9733 Topanga Canyon Blvd. APT310, Chatsworth, CA 91311

Phone: 213-4467172

