

CONTACT US

If you encounter any problems when using AIR CHOICE products, please feel free to contact us through the following methods or scan the QR code to get a quick response and a 100% satisfactory solution.

Amazon Platform: "Contact Seller"

Official Website: <https://airchoice.afterservice.vip>

Email Address: airchoice@afterservice.vip

Questions or Problems?

Tell us

We are here
to help with
our lifetime professional
100% satisfied service
within 12 hrs.

✉ airchoice@afterservice.vip


Get 24/7 Assistance at



Use camera or QR scanner to scan

Or Visit: <https://airchoice.afterservice.vip>

air choice

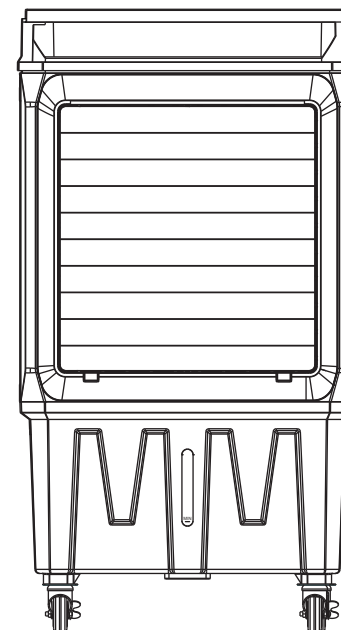

AIR COOLER

JH-320Y

USER MANUAL

INTRODUCTION

Thank you for choosing our fan.

This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product.

Please take a few minutes to read it.

TABLE OF CONTENTS

SECTION 1

INTRODUCTION	PAGE 1
IMPORTANT INSTRUCTIONS	PAGES 3-4

SECTION 2

TECHNICAL PARAMETERS	PAGE 5
PRODUCT DIAGRAM	PAGE 5
PACKAGE INCLUDES	PAGE 6

SECTION 3

ASSEMBLY INSTRUCTIONS	PAGE 6
OPERATION INSTRUCTIONS	PAGES 7-8

SECTION 4

PANEL CONTROL	PAGES 9-10
REMOTE CONTROL	PAGES 10-11

SECTION 5

CLEANING AND MAINTENANCE	PAGE 12
STORAGE & MAINTENANCE GUIDELINES	PAGE 12
FAULT AND MAINTENANCE	PAGE 13

SECTION 6

WARRANTY	PAGE 14
----------	---------

IMPORTANT INSTRUCTIONS


1. To reduce the risk of fire or electric shock, do not use this product with other speed control devices.
2. Do not soak the main body of the motor in water or rinse under the tap tap.
3. Use this fan only as described in this manual, other uses are not recommended, as it may cause fire or electric shock.
4. To prevent electric shock, do not immerse the plug or cord in water, and do not spray liquid to it.
5. When the fan is not in use, unplug the fan from the socket, move the fan to another location, and then clean it.
6. After the machine adds water, do not tilt or collide. Push it slowly so as to prevent water overflow. It is strictly forbidden to place it on the inclined ground to prevent accidents.
7. This machine should not be placed at high temperatures or ultra-low temperatures. The water in the water tank is likely to deteriorate during the summer season and hot weather. Please make sure you change the water.
8. When packing and storing are required, the fan should be run with normal air for a period of time so that the evaporator is fully dried. This is to prevent any humidity odors caused by a wet surface.
9. This machine has a strong humidification effect, do not use it in a closed environment, if used in a closed environment, please turn off the cold air function.
10. Add water promptly when the water level is below the lowest water line.
11. Do not operate the fan in the presence of explosive or flammable fumes.
12. Avoid contact with moving parts of the fan.
13. To disconnect, grip the plug and pull it away from the wall outlet. Never pull on the cord, and always use it on a dry surface.
14. Do not operate any fan with a damaged cord or plug. If the product is damaged, please discard the fan or return it to an authorized service facility for examination or repair.

15. Avoid placing the cord in walking areas or areas with a lot of movement in order to avoid tripping.
16. The appliance is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction.
17. Close supervision is necessary when any appliance is used by or near children. Children should not play with the appliance.
18. Do not leave the fan running unattended.
19. Disconnect from the power supply before removing the protective cover.


TECHNICAL PARAMETERS

Model No.	JH-320Y
Item Name	7.9 Gal AIR COOLER
Rated Voltage	120V (60Hz)
Rated Power	120W
3 Mode Fan Speeds	Low / Medium / High
Swing	Vertical and Horizontal
Net Weight	20.4 LBS
Product Size	18.9×12.99×34.64 Inch

PRODUCT DIAGRAM

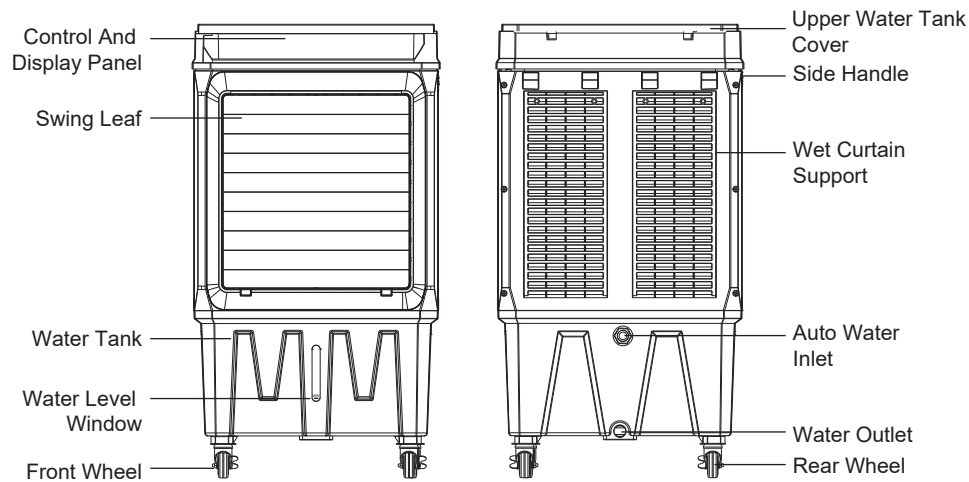


PACKAGE INCLUDES

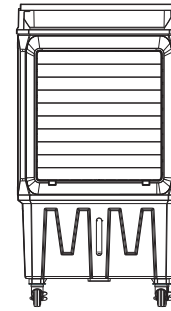

1X Air Cooler Fan



1X Remote Control

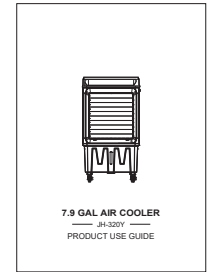

1X Owner's Manual



1X Adapter




4X Ice BOXES



16X Screws


ASSEMBLY INSTRUCTIONS

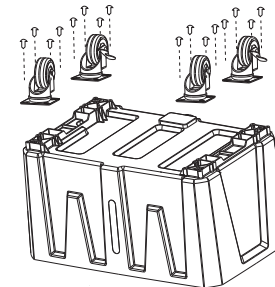


Align the locating holes in the base with the locating holes above the wheels, and tighten the screws.

NOTE:

The wheel with a lock is the rear wheel, and the wheel without a lock is the front wheel.

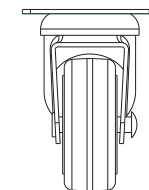

Front Wheel

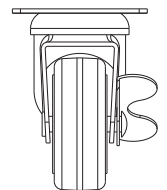

Rear Wheel

OPERATION INSTRUCTIONS

1. ADD WATER MANUALLY:

- Open the upper flip cover and add water slowly (Figure A).
- Observe the water level through the water level window, control the water increase.
- For your health and the health of your family, you should use clean tap water. Unplug before adding water.
- Do not splash water into the motor and surrounding parts to avoid leakage accidents.
- Make sure that the water level in the water tank exceeds the minimum level (Indicated by "Min") (Figure B).

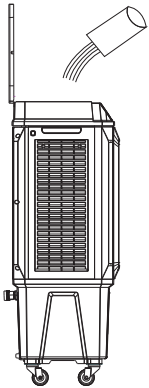


Figure A

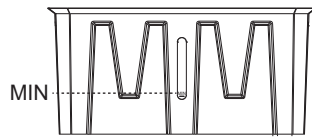


Figure B

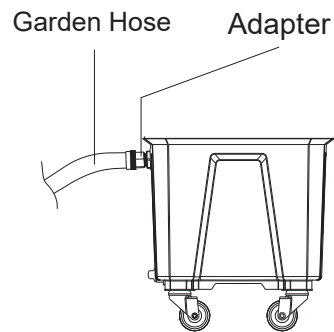


Figure C

2. CONTINUOUS FILL

- Install the adapter to the automatic water inlet on the back of the product.
- Screw the garden hose into the other end of the adapter.
- Open the faucet and add water to the tank (Figure C).
- Adapter specifications: 3/4" GHT Female to 1/2" NPT Female.
- There is no need to close the faucet. The control device inside the water tank will control the water level all the time, to keep it at the maximum.
- If there is a water leak, put some water pipe sealing tape on the connections on both sides of the adapter.

3. THE USAGE OF THE ICE-BOX:

- If you use the ice box for the first time: open the lid, inject water up to the scale, then tighten the lid.
 - Set aside for 30-40minutes, till the water and crystal ice are completely mixed.
 - Put the ice box in the freezer of the refrigerator for two hours.
 - Take out the ice box out and put it into the air cooler's ice container to cool down the water temperature.
 - After using it for a long time, the ice crystal turns into jelly, please put it back in the refrigerator again. It can be recycled and reused.
 - The drain is at the bottom, as shown in Figure D.
 - Rotate and pull out the silicone plug of the water outlet, the body is tilted, and the water tank can be completely emptied. The machine should be drained and cleaned regularly.
- Note: Please empty the water tank if it will not be used for a long time.


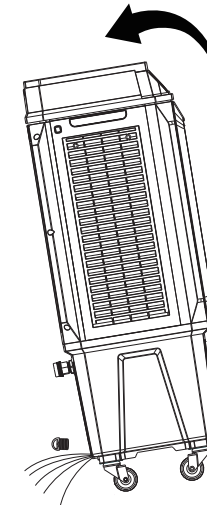



Figure D


PANEL CONTROL


NOTE:


Before using this product, please lift up the swing leaf.

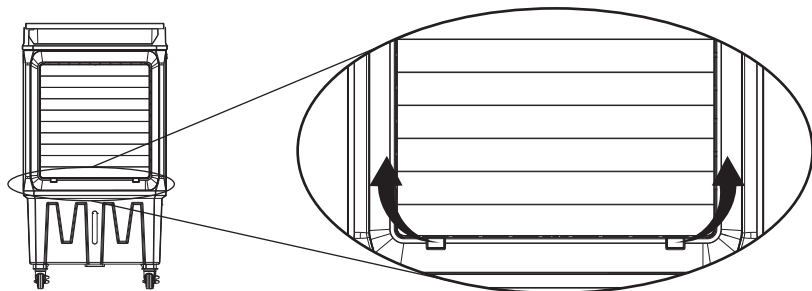


Place the unit on a firm-level surface and plug it into a socket. The power indicator light reminding this product is in standby mode. Turn on the  button, the default is low speed. Press it again, and the machine will be in standby.

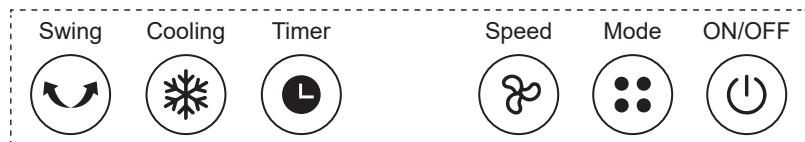



 **ON/OFF Button:**
Press this button to open the air cooler. Press this button at any state to stop the operation.

 **Speed Button:**
Press this button to change the speed between low / medium / high.

 **Mode Button:**
Press this button to change the fan mode between normal mode and natural mode.

 **Swing Button:**
Press this button to control the left and right movements, and press it again to stop swinging.

 **Timer Button:**
Press this button to set the timer, maximum 12 hours.

 **Cooling Button:**
Press this button to open or close the cooling system.



NOTE:

Do not open the cooling system when the water tank is empty. If the water tank is empty, the icon shines and the buzzer indicates about 10 seconds, the pump switch is cut off automatically.

REMOTE CONTROL

NOTE:

Before using the remote control, remove the plastic insulation film located under the battery.

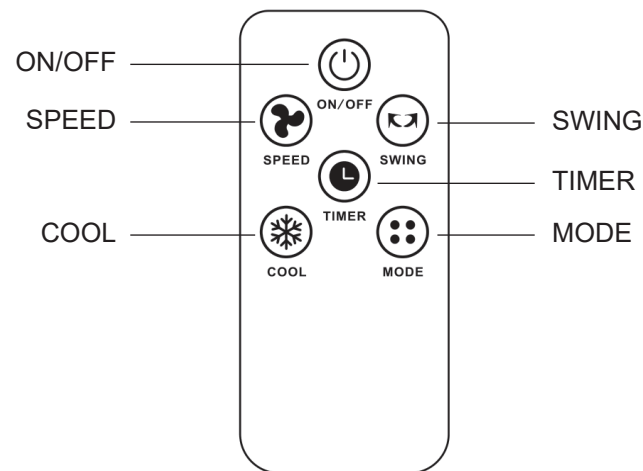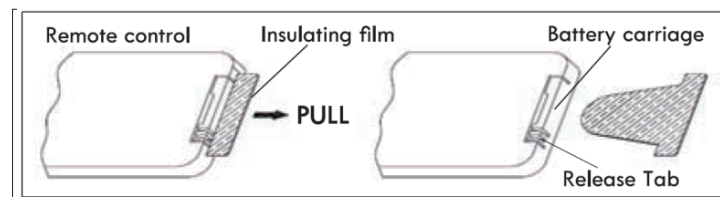

- The remote control must be pointed directly at the receiver on the fan when using. If the remote control is not pointed directly at the receiver, the range will decrease.
- The remote control may not operate in a room where heavy machinery is operating.
- Do not block the line of sight between the remote control and the receiver.
- Handle the remote control with care. Do not drop the remote control on the floor or bang it against hard objects.

Guidelines for use of batteries

- Before first use:

Pull the protective film to remove it. The remote control is now ready to use.

- To replace the battery:

Open the battery compartment on the back of the remote control and replace the used battery with a new one. Battery type: CR2025.

Dispose of the battery

- The battery must be taken to a household hazardous waste collection site for proper handling.

CLEANING AND MAINTENANCE

NOTE:

After a long-time operation, dust accumulation on the wet curtain would affect the airflow and air purification. Please clean the machine regularly.

1. Clean the wet curtain

Turn off the power, loose the screws in the back-cover plate, and take out the back-cover plate.

Loosen the plastic nut on the wet curtain to remove the back wet curtain. Clean it with a soft brush and mild detergent, rinse it with water, and dry it in the sun, then install it back into the machine.

If the dirt is hard to remove after long-term use, please change to a new wet curtain.

2. Clean the surface

Turn off the power, and clean it with a mild detergent and a soft cloth.

NOTE:

The control panel must not be touched by water.

STORAGE & MAINTENANCE GUIDELINES

1. Be sure to unplug the power cord from the outlet before cleaning.
2. Plastic parts should be cleaned with a mild soap and a damp cloth or sponge. Do not submerge the unit in water to clean it. Thoroughly remove soap with clean water.
3. Be sure that no water or other liquid gets inside the fan motor.
4. Dry all parts completely before reassembling and reconnecting to a power source.
5. Store the fan in a cool, dry location when not in use. To prevent the accumulation of dust and dirt, use the original packaging to repack the unit.

FAULT AND MAINTENANCE

Trouble	Cause	Solution
The product does not work	1. The power cord is unplugged or in poor contact.	1. Plug the power back in firmly or try plugging it into a different outlet to connect the power.
	2. The LED screen is damaged.	2. Contact customer service & repair center.
	3. Not working after a while or for other reasons.	3. Please provide the video and contact customer service & repair center.
Bad cooling effects	1. Obstructed air inlet or outlet or other sources of heat.	1. Remove the obstruction or remove other sources of heat .
	2. Other reasons.	2. Please provide the unusable video, and contact customer service & repair center.
The water pump does not work	1. The water level in the water tank is lower than the minimum water level scale.	1. The addition of water exceeds the minimum water level scale.
	2. The cooling mode is not activated.	2. Turn on the cooling mode.
	3. Other reasons.	3. Please provide the unusable video, and contact customer service & repair center.
The remote control does not work	1. Exceeding the control range of the remote control (16ft).	1. Bring the remote control close to the Air conditioner and make sure it is pointed at the product.
	2. The remote control was not pointed at the signal receiver of the unit.	
	3. The batteries have no electricity it.	2. Replace the batteries.
Lack of accessories	1. Lack of ice box.	1. Contact customer service & repair center.
	2. Missing wheel or screw.	

WARRANTY

AIR CHOICE warrants this product against defects in materials and/or workmanship under normal use for a period of ONE (1) YEAR from the date of purchase by the original purchaser (“Warranty Period”). If a defect arises and a valid claim is received within the Warranty Period, at its option, AIR CHOICE will 1) repair the defect free of charge, using new or reconditioned replacement parts, or 2) replace the product with a new product that is at least functionally equivalent to the original product, or provide a store credit in the amount of the purchase price of the original product. A replacement product or part, including a user-installable part installed in accordance with the instructions provided by AIR CHOICE, assumes the remaining warranty of the original product. When a product or part is exchanged, any replacement item becomes your property and the replaced item becomes AIR CHOICE’ s property. When a store credit is granted, the original product must be returned to AIR CHOICE and becomes AIR CHOICE’ s property. To obtain warranty service, e-mail AIR CHOICE Limited Warranty Service at **airchoice@afterservice.vip**. Please be prepared to describe the product that needs service and the nature of the problem.

This warranty does not apply to:

a) damage caused by failure to follow instructions relating the product’s use or the installation of components; b) damage caused by accident, abuse, misuse, fire, floods, earthquake or other external causes; c) damage caused by service performed by anyone who is not a representative of AIR CHOICE; d) accessories used in conjunction with a covered product; e) a product or part that has been modified to alter functionality or capability; f) items intended to be replaced periodically by the purchaser during the normal life of the product including, but not limited to, batteries or light bulbs; g) any product sold “as is” including, but not limited to, floor demonstration models and refurbished items; or h) a product that is used commercially or for a commercial purpose.