



OWNER'S MANUAL

MODEL GC-1065

Please read before using this equipment

Metal Detector

FEATURES

With your Metal Detector, you can hunt for coins, relics, jewelry, gold, and silver just about anywhere. This metal detector is versatile and easy to use.

The detector's features include:

Two Operation Modes: ALL METAL, DISC

ALL METAL—lets you search for all kinds of metal with auto ground balance and high sensitivity. It's the best operation mode.

DISC—discriminates what kind of metal being detected.

Volume—to adjust the volume level of speaker and headphone

Earphone Jack – lets you connect stereo earphones (not supplied) to the detector in private.

View meter and Pointer – The meter pointer swings to the right if metal is found.

Water proof Search Coil – lets you search for metal objects under shallow water.

Note: The search coil is waterproof, but the control housing is not waterproof.

Adjustable Stem – lets you adjust the detector's length for comfortable use.

Note: Your metal detector requires one 9V alkaline battery (not supplied).

PREPARATION



ASSEMBLING THE DETECTOR

Assembling the detector is easy and requires no special tools. Just follow these steps.



1. Top Stem 2. Lower Stem(with Search Coil) 3.Control Box

1. Depress the spring clip in the middle stem and insert it into the top stem(1) aligning the clip with the hole.
2. Loosen the middle stem's lock nut in the direction of the arrow. Then insert the lower stem (2) into the middle stem. Turn the stem's lock nut in the reverse direction of the arrow to lock it in place.

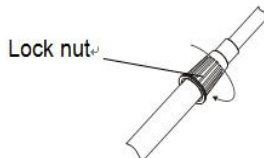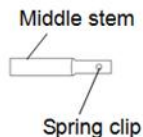

3. Unscrew the bolt of the control box(3) and hitch the control box to the top stem. Then, insert the bolt into the assembly hole on top stem and tighten it with the box.



4. Wind the cable around the stem. Insert the search coil cable plug into the five pin jack at the bottom of control box's housing.



5. When you stand upright with the detector in your hand, the search coil is level with and about 0.5~2 inches / 1~5cm above the ground. You can lengthen or shorten the stem basing on your height. After figuring out the suitable length, then tighten the lock nut.

Caution:

- The search coil cable plug fits into the connector only one way. Do not force the plug or you could damage it.

ADJUSTING THE SEARCH COIL

Loosen the knobs at the search coil's end, then adjust the search coil to the

desired angle. (The search coil should be parallel with the ground.) Tighten the knobs just enough to keep the search coil from rotating or wobbling.


INSTALLING BATTERY

You need one 9V alkaline battery to power your detector.

Cautions:

Use only fresh battery of the required size and recommended type.

1. If the detector is on, turn the power off.
2. Press on the battery compartment cover and slide the cover off in the direction of the arrow.

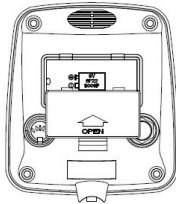

3. Connect the battery with the battery connector taking care of the polarity. Then put the battery into the compartment.
4. Replace the cover.

Cautions:

- Always remove old or weak battery; battery can leak chemicals that can destroy electronic parts.
- If you do not plan to use the detector for a week or more, remove the battery.
- Dispose of old battery promptly and properly.

You can extend battery life by using earphones, which require less power than the built-in speakers.

USING EARPHONES

You can connect a pair of stereo earphones (not supplied) to the detector so you can listen to it privately. Using earphones also saves battery power and makes it easier to identify subtle changes in the sounds you hear, for better

detection results.

To connect earphones to the detector, insert the earphones' 3.5mm plug into the EAR jack on the control box.

Note: The detector's internal speaker disconnects when you connect earphones.

LISTENING SAFELY

To protect your hearing, follow these guidelines when you use earphones.

Set the volume to the lowest setting before you begin listening.

After you begin listening, adjust the volume to a comfortable level.

Do not listen at extremely high volume levels. Extended high volume listening can lead to permanent hearing loss.

Once you set the volume, do not increase it. Over time, your ears adapt to the volume level, so a volume level that does not cause discomfort might still damage your hearing.


Traffic Safety

Do not wear earphones while operating your detector near high-traffic areas.

Even though some earphones are designed to let you hear some outside sounds when listening at normal volume levels, they still can present a traffic hazard.

FUNCTIONS AND INDICATORS

1. A QUICK LOOK AT THE DETECTOR

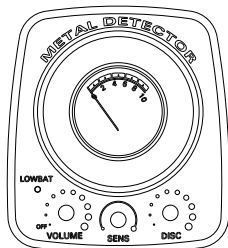

- a. DISC—Rotate the control clockwise away from ALL METAL to get DISC mode. The DISC mode comes with auto ground balance. Rotate the control slowly

and clockwise to eliminate different trash objects.

Rotate the control counter clockwise to the end to get ALL METAL mode. All METAL also comes with auto ground balance. It's used to find not only ferrous metal, but also non-ferrous one (see more details below).

- b. VOLUME—Rotate the control clockwise to power on the unit. Rotate it fully counter clockwise to power off the unit.
- c. SENS—Rotate the control clockwise to get higher sensitivity. Rotating it counter clockwise to decrease it.
- d. LOW BAT—Low battery indicator. When LOW BAT indicator lights, user should replace the batteries at once.
- e. EAR—It's a 3.5mm headphone jack for connecting headphones.
- f. View meter—When unit finds any metal target , the meter pointer swings to the right.

TESTING AND USING THE DETECTOR

The metal detector has two operation modes: ALL METAL & DISC. All metal is used to find all kinds of metal targets. DISC is used to discriminate the metal type.

In general case, user firstly sets the operation mode to ALL METAL, DISC to counter clockwise end, SENS to high position. Then hold the search coil parallel with the ground about 1~5cm above the surface. Sweep the search coil from side to side in an arc line of 7cm motion.

When the detector detects a buried target, it sounds a tone. User can make a visual note of exact spot on the ground where the detector beeps.

Then stop the search coil directly over this point on the ground. Move the search coil straight forward away from you and straight back towards you a couple of times. Meantime slowly rotate the DISC control clockwise away from ALL METAL until the unit does not sound or sounds short tone. You can identify what kind of metal is rejected according to the setting position of DISC.

A reference for you to know what kind of metal is rejected depending on the

DISC setting.

Setting of DISC	Metal Rejected.
Near 11:00	Iron
Near 12:00	Nickel coin(5¢), pull tab
Near 13:00	Zinc coin(1¢ 87 version)
Near 15:00	Copper coin (1¢ 76 version)

When the DISC control is set to the clockwise end most of metal is rejected, except silver(25¢,50¢ and 1\$).

Factors That Affect The Detecting

It's difficult to have an accurate detecting result. It needs practice to get better detection results. Sometimes the detecting may be restricted by some factors.

- If there are interference from other instruments or electrical cable or TV or radio in your searching area, lower the sensitivity, or to change the current searching area.
- When searching in highly mineralized area, the unit will sound even if there's no metal. In this case, you can lower the sensitivity and increase the height between the search coil and the ground until the false signal disappears. If necessary, reset the DISC.
- When searching in trash area, it's better to set the DISC to 11:00 position, so that the unit can notch most of invaluable metals such as nails and small trashy iron.
- Move away any metal digging tool when searching.
- Sensitivity level is generally in contradiction with that of the Discrimination. The higher the sensitivity level is, the worse discrimination will be. But you can lower the sensitivity to have better discrimination.

•

CARE AND MAINTENANCE

Your metal detector is an example of superior design and craftsmanship. The following suggestions will help you care for your metal detector so you can

enjoy it for years.



Handle the detector gently and carefully. Dropping it can damage circuit boards and cases and can cause the detector to work improperly.



Use the detector only in normal temperature environments. Temperature extremes can shorten the life of electronic devices, damage the cases of the detector.



Keep the detector away from dust and dirt, which can cause premature wear of parts.



Wipe the detector with a damp cloth occasionally to keep it looking new. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the detector.

If you have any question about this product,
please contact customer service via email: supportus@tymextools.com

